


# Cart Crates – Unpacking Guide

STARC skids / carts are shipped on wheels to facilitate unloading and quick deployment of the cart into the facility.

The cart's casters are protected by wood boxes built around the casters and secured to the welded aluminum frame to facilitate shipping and to prevent damage during transit.

The steps below guide the removal of the wood enclosure and allow the cart to be wheeled away.

## 1. Remove the outer corrugated lid and wrapper

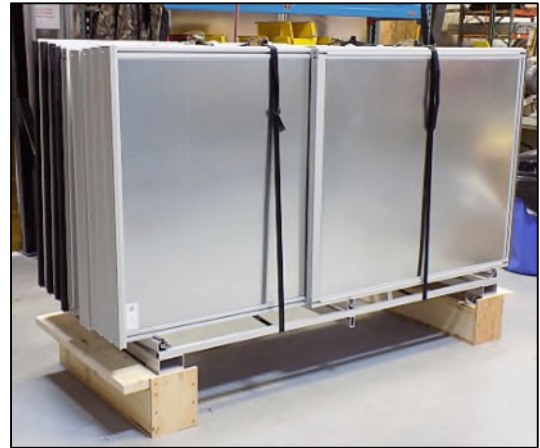

**2. Unscrew all 4 plywood end caps.** Two hex screws on each cap also need to be removed; a 5/16" hex driver will be required as well as the phillips driver.



**3. Knock down the 2x8's on both sides of each end.** This will allow the casters to spin when rolling away.

**4. Wheel the cart away.** Dispose of the wood blocking.

